



Razer Ornata Chroma cheat sheet

General

Fn + F1	Mute audio output
Fn + F2	Increase audio output
Fn + F3	Decrease audio output
Fn + F5	Skip a track backward
Fn + F6	Play/Pause
Fn + F7	Skip a track forward
Fn + F11	Decrease the brightness of keyboard LEDs
Fn + F12	Increase the brightness of keyboard LEDs
PauseBreak	(Sleep key) Suspend the operating system

More information: defkey.com/ar/razer-ornata-chroma-shortcuts

[Customize this PDF...](#)

On-the-fly macro recording (PC)

Follow these steps to create an "on-the-fly" macro recording

Fn + F9	1. Start recording macro.
	2. The Macro recording indicator will light up to show that device is ready to record.
	3. Type in the keys you want to record.
Fn + F9	4. Press the key combination to stop recording or press Esc to cancel recording. The Macro recording indicator will start blinking to show that the device has stopped recording and is ready to save the macro.

5. Press the desired key where you want to save the macro.

Gaming Mode

Fn + F10	Toggle Gaming Mode. An indicator will light up when this mode is active
----------	---

Gaming Mode disables Windows key for accidental usage. It can also maximize the effect of anti-ghosting. You can also choose to disable Alt + Tab and Alt + F4 functions by using Gaming Mode Tab in Razer Synapse.

Source: Razer Ornata Chroma master guide

Last modification: 6/12/1443 ص 11:46:30