



Newtek Tricaster Spickzettel

Switcher

F1 oder Shift + F1	... to F12: Program Row, Inputs 1 to 24 (by model)
numrow09 oder Shift + [0 - 9]	Preview Row, Inputs 1 to 24 (by model)
[	Transition Delegate – select BKGD
Shift + [	Transition Delegate – multi-select BKGD
]	Transition Delegate – select DSK 1
Shift +]	Transition Delegate – multi-select DSK 1
\	Transition Delegate – select DSK 2
Shift + \	Transition Delegate – multi-select DSK 2
Backspace	Transition Delegate – select DSK 3
Shift + Backspace	Transition Delegate – multi-select DSK 3
Insert	Transition Delegate – select DSK 4
Shift + Insert	Transition Delegate – multi-select DSK 4
B	Transition Delegate – select FTB
Shift + B	Transition Delegate – multi-select FTB
Ctrl + B	Select FTB Delegate and perform Fade
A	Auto DSK 1 On/Off
S	Auto DSK 2 On/Off
D	Auto DSK 3 On/Off
F	Auto DSK 4 On/Off
Shift + A	Take DSK 1 On/Off
Shift + S	Take DSK 2 On/Off
Shift + D	Take DSK 3 On/Off
Shift + F	Take DSK 4 On/Off
, oder .	Select Transition (prev/next)
Ctrl + F	Select Fade Transition
Shift + Ctrl + F	Restore Last Transition
Z	Transition – Slow

X	Transition – Medium
C	Transition – Fast
Shift + C	Transition – Increase Speed
Shift + Z	Transition – Decrease Speed
E	Toggle Reverse Transition On/Off
Alt + E	Ping Pong Transition (off/on)

T-Bar

Enter	Take
Shift + Enter	Take T-bar Back to Top
Space	Transition ... Go/Pause
Shift + Space	Auto Reverse
T oder Shift + T	Adjust T-bar... Down/Up
Ctrl + T oder Ctrl + Shift + T	Adjust T-bar faster... Down/Up
H	Halfway T-bar... Take

Record, Grab, And Stream

R oder Shift + R	Record on/off
P	Grab (still image)
Ctrl + /	Stream Start
Ctrl + Alt + /	Stream Stop

Tabs

Ctrl + F1	... to F12: Show (DDR, PTZ, Mixer, etc.; varies by model) tab
Ctrl + Shift + F1	... to F8: Select M/E 1- 8
Ctrl + M	Show M/E pane
Alt + M	Hide M/E pane
M	Toggle M/E pane

Workspace

Alt + Num 0	Show Interface A
Alt + Num 1	Show Interface B
Alt + Num 2	Show Interface C
Alt + Num 3	Show Interface D
Ctrl + Num 0	Show Multiview A
Ctrl + Num 1	Show Multiview B
Ctrl + Num 2	Show Multiview C

Ctrl + Num 3

Show Multiview D

Media Players

K	Stop
L	Play
J	Go to previous playlist item
;	Go to next playlist item
U	Autoplay On/Off
'	Loop On/Off
Q	Single On/Off
Pfeiltasten	Navigate through Playlist items
I	Set In Point for current Playlist Item (Clip or Audio file)
O	Set Out Point for current Playlist Item (Clip or Audio file)
/	Split clip at current frame
G	Reset In and Out Point to the file's first and last frame

Edit Title Pane

Ctrl + Shift + S	Save the current title page
Ctrl + Shift + S	Save the current title page, and duplicate it in the playlist
Page Up	Save the page and move to the previous playlist item
Page Down	Save the page and move to the next playlist item

Selection And Navigation

Ctrl + A	Select All
Home	First Item
End	Last Item
Pfeiltasten	Navigate through Playlist items
Shift + Home	Select All Previous Items
Shift + End	Select All Following Items
Shift + Home	Playlist - select to Top
Shift + End	Playlist - select to Bottom
Shift + Aufwärtspfeil	Playlist – add to selection (up)
Shift + Pfeil nach unten	Playlist – add to selection (down)

Misc

Ctrl + X	Cut
Ctrl + C	Copy
Ctrl + V	Paste
Del	Delete
Alt + B	Show TriCaster version

Source: jonjones.co

Letzte Änderung: 09.01.2024 11:19:27

Mehr Informationen: defkey.com/de/newtek-tricaster-tastaturkurzel

[Passen Sie dieses PDF an...](#)