

Ducky One 2 Mini cheat sheet

RGB LED backlit modes

Fn + Alt + T	Cycle between backlight modes: First mode: Wave mode (default)
Fn + Alt + Z	Adjust color red (R) brightness. 10 levels
Fn + Alt + X	Adjust color green (G) brightness. 10 levels
Fn + Alt + C	Adjust color blue (B) brightness. 10 levels
Fn + Alt + V	Erase red, green and blue color setting
Fn + Alt + Space	(Color palette) Activate color palette to display various colors on each key. Press on the desired color, all the keys will change to match that color.

RGB LED zone customization modes

Fn + Alt + G	CM1 cycle: First step turns on user's customized zone and color. Second step turns on user's customized zone and color in breathe mode. Third step turns off CM1
Fn + Alt + B	CM2 cycle: First step turns on user's customized zone and color. Second step turns on user's customized zone and color in breathe mode. Third step turns off CM2
Fn + Alt + Caps Lock	Recording: Press 3 seconds until the G (CM1) and B (CM2) keys light up, then choose layer for setting, press it again to start recording
Caps Lock + V	Erase all LED light

Fn shortcuts

Fn + Esc	` or ~ (tilde)
Fn + Y	Insert
Fn + [Home
Fn +]	Print screen

Ducky Gaming interaction mode

Ducky Gamble mode:

Fn + Alt + ,	(hold 3 seconds) Minesweeper game
--------------	--------------------------------------

Debounce time setting

Debounce time adjusts the debounce time of the metal shrapnel in the mechanical shaft during the pressing process. The shorter time, the sooner it can be triggered. However if the time is too short, misjudgements may occur. It is not necessary to change the time setting.

Hold the following shortcut keys for 3 seconds. The keyboard will flash 3 times to indicate debounce time has been switched successfully.

Fn + Alt + Y	Set debounce time to 5ms
--------------	--------------------------

Enable / Disable Windows key

Fn + Alt + Win	Press 3 seconds, the keyboard's backlit will flash 3 times to indicate the Windows key has been enabled / disabled.
----------------	------------------------------------------------------------------------------------------------------------------------------

Reset to factory defaults

RWin + LWin	(hold for 3 seconds) Reset to US ANSI and EU ISO layout
-------------	------------------------------------------------------------

Ducky Mini Macro

We have covered most of the macro shortcuts here but if you need detailed information about macros, please refer to One 2 manual.

Macro: Multimedia function keys

Fn + Win + D	Play / Pause
--------------	--------------

Macro: Keyboard button function keys

Fn + Shift + Y	Number lock
----------------	-------------

Source: Ducky One 2 Mini manual (PDF)

Last modification: 11/14/2021 9:59:15 PM

More information: defkey.com/ducky-one-2-mini-shortcuts?filter=basic

[Customize this PDF...](#)