



RK61 cheat sheet

Combination key swithcing

Fn + Left Ctrl	Activate second function of combination keys (except arrow keys). Press again to restore the 9 keys' (Y, U, I, H, J, K, N, M, <) main function, but other combination keys will still use their second function. Press Fn + Ctrl third time to restore combination keys' main function
Fn + Right Shift	Use arrow keys' second function. Press again to restore original function

Modes

Fn + Tab	Switch wired / Bluetooth mode
Fn + P	(hold for 3 seconds) Enter pairing mode
Fn + Q or Fn + W or Fn + E	Switch Bluetooth device

This keyboard can save three Bluetooth devices at a time. You can switch between these three paired devices by pressing Fn + Q, W, E.

Backlight mode

Fn + \	Switch backlight mode
Fn + [or Fn +]	Control the brightness of backlight
Fn + ; or Fn + '	Control the speed of backlight

Other FN key combinations

Fn + Lock	Enable / Disable Win key
Fn + Esc	` ~
Fn + 1	F1
Fn + 2	F2
Fn + 3	F3
Fn + 4	F4
Fn + 5	F5
Fn + 6	F6
Fn + 7	F7
Fn + 8	F8
Fn + 9	F9

Fn + 10	F10
Fn + 11	F11
Fn + 12	F12
Backspace	Del
Y	PrintScreen
U	Scroll Lock
I	Pause
H	Insert
J	Home
K	Page Up
N	Del
M	End
,	Page Down
/	/ ? (To type "?", you must press FN + Shift + /)
Left arrow	Alt
Down arrow	Context Menu
Right arrow	Ctrl

Last modification: 2024. 12. 10. 22:23:45

More information: defkey.com/hu/royal-kludge-rk61-shortcuts

[Customize this PDF...](#)