Kinesis Freestyle Edge RGB cheat sheet

General

Note: SmartSet key is the key with gear icon. It is used to control all onboard programming shortcuts.

SmartSet + Shift + L	Program lock/unlock. This will enable/disable all onboard programming commands to prevent accidental repogramming of the keyboard
Remap	Remap key action. Enter Remap Mode, select the "Source" key action (LED flash rapid), then select the physical "Destination" key (LED flash slow)
Macro	Record macro on-the-fly. Enter Macro Record Mode, select the "trigger" key or key combo (LED flash rapid), then type your macro (LED flash slow). Tap Macro again to stop recording
Profile	Load profile (1 to 3)

This will cycle between the three primary Profiles. Profile 1 = Left LED, Profile 2= Right LED, and Profile 3 = Left & Right LED.

SmartSet + [1 - 9] Load profile (1 to 9)

When Profiles 4-9 are loaded, both of the LEDs will be off.

SmartSet + F7	Run status report
SmartSet + F8	Connect/Disconnect v-Drive
SmartSet + F9 then [0 - 9]	Set Global Macro Playback Speed or Temporarily Disable Macros
SmartSet + F10	Enable/Disable NKRO mode
SmartSet + F11	Enable/Disable Game mode
SmartSet + Shift + F12	Soft reset. This will erase all custom remaps and macros in both layers of the active profile
SmartSet + F12	(pressed when plugging the keyboard) Hard reset. Do this while plugging Edge into your computer to erase remaps and macros in all 9 profiles and restore the default keyboard settings

SmartSet + Profile App refresh

App Refresh shortcut implements all Layout, Lighting

and Settings changes saved via the SmartSet App without disconnecting the v-Drive.

Source: Kinesis Freestyle Edge RGB Quick Start Guide (PDF)

Last modification: 7/17/2022 2:18:58 PM

More information: defkey.com/kinesis-freestyleedge-rgb-shortcuts

Customize this PDF...