



Feker IK75 RGB cheat sheet

General

Fn + Esc	Restore factory settings
Fn + F1	Computer screen brightness -
Fn + F2	Computer screen brightness +
Fn + F3	Calculator/Task manager
Fn + F4	Multimedia / F4
Fn + F5	Last song / F5
Fn + F6	Next song / F6
Fn + F7	Pause / Play previous
Fn + F8	Stop / Play / Pause
Fn + F9	Mute next
Fn + F10	Volume decrease / Mute
Fn + F11	Volume increase / decrease
Fn + F12	Mail / Volume increase
Fn + A	Switch to Windows mode
Fn + S	Switch to MacOS mode
Fn + I	PrintScreen
Fn + O	Scroll Lock
Fn + P	Pause
Fn + Space	Turn backlight off / on
Fn + Del	Switch backlight mode
Fn + ~	Switch backlight color
Fn + Up arrow	Backlight brightness +
Fn + Down arrow	Backlight brightness -
Fn + Left arrow	Backlight speed -
Fn + Right arrow	Backlight speed +
Fn + Right Ctrl	Switch decorative light mode
Fn + Right Alt	Switch decorative light color
Fn + 1	Bluetooth no 1, short press to switch, long press 3S to enter pairing
Fn + 2	Bluetooth no 2, short press to switch, long press 3S to enter pairing
Fn + 3	Bluetooth no 3, short press to switch, long press 3S to enter pairing
Fn + 4	2.4G mode, long press 3S to enter pairing
Fn + Backspace	Check remaining battery

Fn + Win

Lock windows key (only valid under win system)

Last modification: 2023-10-20 11:35:17

More information: defkey.com/mg/feker-ik75-rgb-shortcuts

[Customize this PDF...](#)