



# Vissles V84 cheat sheet

## Bluetooth mode

Fn + Q	(press for 3 seconds) Bluetooth pairing mode. Bluetooth switch at the bottom should be turned on before using this shortcut
--------	---

The entire keyboard backlight will flash in white for 3 seconds and then the backlight of the Q key will quickly flash. This means the keyboard has successfully entered into Bluetooth pairing mode.

You can now search for the name "Vissles V84" in your device to pair with the keyboard.

The keyboard can be paired with another four device by using following shortcuts.

Fn + W	(long press) Pair with a device 2
Fn + E	(long press) Pair with a device 3
Fn + R	(long press) Pair with a device 4
Fn + T	(long press) Pair with a device 5

To switch devices, press Fn + Q / W / E / R / T. The backlight will flicker 3 times to indicate the switching.

## System preference

Fn + S	On Android/Windows, this will switch to iOS/Mac layout
Fn + A	On iOS/Mac, this will switch to Android/Windows layout

The backlight will flicker 3 times to indicate the switching.

## Backlight

Fn + Home	Switch between 19 lighting effects
Fn + End	Switch between 9 kinds of monochrome sets
Fn + Up arrow	Increase brightness level of the keyboard
Fn + Down arrow	Decrease brightness level of the keyboard
Fn + Right arrow	Increase the lighting speed of the backlight
Fn + Left arrow	Decrease the lighting speed of the backlight

To turn off the backlight, press Fn + Down or Fn + F5 to decrease brightness to lowest level. The backlight

will then go off.

## Macro recording

To record macro, press Fn + Z / X / C until the backlight of Caps Lock and Win/Option flickers in white.

Start recording, enter the content that needs to be recorded. Press Fn + Z / X / C for 3 seconds, then the macro recording content will be saved.

Fn + Z or Fn + X or Fn + C	Trigger corresponding macro
----------------------------	-----------------------------

## Macro recording supports maximum of 16 characters.

Fn + Tab	Switch between Normal and Macro mode
----------	--------------------------------------

## Multimedia - Mac mode

F1	Decrease display brightness level
F2	Increase display brightness level
F3	Mission control
F4	Launch pad
F5 or F6	Nil
F7	Previous track
F8	Play/Pause
F9	Next track
F10	Mute
F11	Decrease the volume
F12	Increase the volume
Fn + F1	F1
Fn + F2	F2
Fn + F3	F3
Fn + F4	F4
Fn + F5	Decrease keyboard brightness level
Fn + F6	Increase keyboard brightness level
Fn + F7	F7
Fn + F8	F8
Fn + F9	F9

Fn + F10	F10
Fn + F11	F11
Fn + F12	F12

Last modification: 2022.12.26 19:14:40

More information: [defkey.com/mn/vissles-v84-shortcuts](https://defkey.com/mn/vissles-v84-shortcuts)

[Customize this PDF...](#)

## Multimedia - Windows mode

F1	Decrease display brightness level
F2	Increase display brightness level
F3	3D cycle through programs on the Taskbar
F4	Mission Control
F5	Decrease keyboard brightness level
F6	Increase keyboard brightness level
F7	Previous track
F8	Play/Pause
F9	Next track
F10	Mute
F11	Decrease the volume
F12	Increase the volume
Fn + F1	F1
Fn + F2	F2
Fn + F3	F3
Fn + F4	F4
Fn + F5	Decrease keyboard brightness level
Fn + F6	Increase keyboard brightness level
Fn + F7	F7
Fn + F8	F8
Fn + F9	F9
Fn + F10	F10
Fn + F11	F11
Fn + F12	F12

## Factory reset

Fn + Space	Hold for 3 seconds to reset the keyboard
------------	--

Source: Vissles V84 User Manual