

RK61 keyboard shortcuts

Combination key switching

Fn + Left Ctrl Activate second function of combination keys (except arrow keys). Press again to restore the 9 keys' (Y, U, I, H, J, K, N, M, <) main function, but other combination keys will still use their second function. Press Fn + Ctrl third time to restore combination keys' main function

Fn + Right Shift Use arrow keys' second function. Press again to restore original function

Modes

Fn + Tab Switch wired / Bluetooth mode

Fn + P (hold for 3 seconds) Enter pairing mode

Fn + Q or Fn + W Switch Bluetooth device
or **Fn + E**

This keyboard can save three Bluetooth devices at a time. You can switch between these three paired devices by pressing Fn + Q, W, E.

Backlight mode

**Fn + ** Switch backlight mode

Fn + [or Fn +] Control the brightness of backlight

Fn + ; or Fn + ' Control the speed of backlight

Other FN key combinations

Fn + Lock Enable / Disable Win key

Fn + Esc ` ~

Fn + 1 F1

Fn + 2 F2

Fn + 3 F3

Fn + 4 F4

Fn + 5 F5

Fn + 6 F6

Fn + 7 F7

Fn + 8 F8

Fn + 9 F9

Fn + 10 F10

Fn + 11 F11

Fn + 12 F12

Backspace Del

Y PrintScreen

U Scroll Lock

I Pause

H Insert

J Home

K Page Up

N Del

M End

, Page Down

/ / ? (To type "?", you must press FN + Shift + /)

Left arrow Alt

Down arrow Context Menu

Right arrow Ctrl

More information: defkey.com/royal-kludge-rk61-shortcuts