

SPC Gear GK530 Tournament cheat sheet

Software / Multimedia keys

Fn + F1	Computer
Fn + F2	Web browser
Fn + F3	Calculator
Fn + F4	Music player
Fn + F5	Previous track
Fn + F6	Next track
Fn + F7	Play / Pause
Fn + F8	Stop
Fn + F9	Mute
Fn + F10	Volume down
Fn + F11	Volume up
Fn + Win	Gaming mode (Win lock)
Fn + Pause	6/N-key rollover
Fn + W	WASD and arrow key swap

Backlight effects: Control

Fn + Up arrow / Down arrow	Lighting brightness up / down
Fn + Left arrow / Right arrow	Backlight effect speed
Fn + -	Effect direction
Fn + +	Backlight color change

Backlight effects: 18 effects

Fn + Insert	Modes 1-3
Fn + Home	Modes 4-6
Fn + Page Up	Modes 7-9
Fn + Del	Modes 10-12
Fn + End	Modes 13-15
Fn + Page Down	Modes 16-18

10 custom backlight modes

Custom modes are aimed for use in different games.

Fn + 1 + 5	5 preset modes, may be redefined
Fn + 6 + 0	5 user defined modes

Creating a custom backlight mode

- Press Fn (SPC logo key) + 1 - 0 to choose 1 of 10 custom modes.

- Press FN + ` to start defining custom backlight. PrintScreen key will start blinking indicating backlight color. Switch between colors using Fn + = (RGB) and select the keys for each color. You can switch off key LED completely while PrintScreen is not blinking.

- Press Fn + ` to save custom mode.

Macro keys

- Under gaming mode (FN + Win) press FN + Esc. Win and Esc keys led will be backlit.

- Select any key for defining macro by pressing FN + chosen key. When led starts to blink, choose the required key sequence.

- Press FN + chosen key to save macro. Press FN + Esc to exit macro.

Factory reset

Fn + Esc then F1 + F3 + F5	Pressing Fn + Esc, and immediately after pressing F1 + F3 + F5 will reset the keyboard to the factory defaults
-------------------------------	--

Source: spcgear.com

Last modification: 9/2/2021 4:22:00 PM

More information: defkey.com/spc-gear-gk530-tournament-kailh-blue-rgb-shortcuts

[Customize this PDF...](#)