



Epomaker RT100 cheat sheet

General

[Customize this PDF...](#)

Fn + Esc	(hold 3 seconds) Restore factory settings
Fn + F1	Brightness -
Fn + F2	Brightness +
Fn + F3	Win + Tab
Fn + F4	Win + E
Fn + F5	(Windows only) Mail
Fn + F6	(Windows only) Homepage
Fn + F7	Previous song
Fn + F8	Play/Pause
Fn + F9	Next song
Fn + Q	Short press to switch to Bluetooth 1, long press to pair
Fn + W	Short press to switch to Bluetooth 2, long press to pair
Fn + E	Short press to switch to Bluetooth 3, long press to pair
Fn + R	Short press to switch to 2.4G, long press to pair

To enter wired connection mode, turn the keyboard power switch off and use USB-C cable to connect the keyboard to your device.

Fn + Win	Lock Win key
Fn + Backspace	Query power (battery power is available in wireless mode)

Backlight

Fn + Up arrow	Backlight brightness +
Fn + Down arrow	Backlight brightness -
Fn + Left arrow	Backlight effect speed -
Fn + Right arrow	Backlight effect speed +
Fn + Del	Main backlight effect switching
Fn + Page Up	Toggle monochrome lights
Fn + Page Down	Battery saving mode (all lights and TV display off)

Source: Product manual

Last modification: 22/09/2023 11:26:38

More information: defkey.com/sw/epomaker-rt100-shortcuts