

Backlighting modes

Fn + 1	Mode 1: Red, Green, Blue
Fn + 2	Mode 2: Yellow, Cyan, Purple
Fn + 3	Mode 3: Blue, Cyan, Red
Fn + 4	Mode 4: Purple, Green, Yellow
Fn + 5	Mode 5: Orange, Purple, Cyan
Fn + 6	Mode 6: Green, Blue, White
Fn + 7	Mode 7: Custom (Default: Off), Custom (Default: Off), Custom (Default: Off)
Fn + 8	Cycle through the same color on all 3 zones: Red, Green, Blue, Yellow, Cyan, Purple, Orange, White
Fn + 9	Color pulse, all 3 zones: Red, Green, Blue, Yellow, Cyan, Purple, Orange, White
Fn + 0	Color shift, all 3 zones: Red, Green, Blue, Yellow, Cyan, Purple, Orange, White
Fn + -	Color pulse, all 3 zones at a time: Red, Green, Blue, Yellow, Cyan, Purple, Orange, White
Fn + =	Rainbow wave

	White / Off
Fn + F2	Zone 2 - Red / Green / Blue / Yellow / Cyan / Purple / Orange / White / Off
Fn + F3	Zone 3 - Red / Green / Blue / Yellow / Cyan / Purple / Orange / White / Off

Factory reset

Fn + F4	Press and hold for 5 seconds. All
	three zones will blink rapidly two
	times in white color to confirm all
	lighting modes and macro
	assignments have been reset to
	defaults.

Source: Corsair K55 manual

Last modification: 6/10/2563 21:06:55

More information: defkey.com/th/corsair-k55-rgbgaming-shortcuts

Customize this PDF...

Speed and direction modes

Dynamic lighting modes 9 through 12 can be further customized with various speed and / or direction modes.

Fn + Up arrow	(modes 9, 10, 11 and 12) Increase speed (Fast > Medium > Slow)
Fn + Down arrow	(modes 9, 10, 11 and 12) Increase speed (Slow > Medium > Fast)
Fn + Left arrow	(modes 11 and 12) Change direction from right to left
Fn + Right arrow	(modes 11 and 12) Change direction from left to right

Customizing backlighting

Fn + F1	Zone 1 - Red / Green / Blue /
	Yellow / Cyan / Purple / Orange /